
Subject: Re: Zeta 2 and ParPortProp
Posted by [stefanf](#) on Fri, 21 Jan 2022 09:09:05 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hi there,

Thanks for the feedback. Whether I plug jumper 1 or not, the behavior is the same.
This message appears on the external monitor connected to the ParPortProp Board:

Initializing ParPortProb OK

Initializing Keyboard....OK

Initializing SD card..... OK

Initializing Serial Port... OK

Starting PortIO cog..... OK

ParPortProp is ready!

and when I connected a PC with terminal software to the RS232 of the ZETA 2 board, these messages:

RomWBW HBIOS v3.0.1, 2020-04-04

ZETA V2 Z80 @ 8,000MHz

0 MEM W/S, 1 I/O W/S, INT MODE 2

512KB ROM, 512KB RAM

CTC: MODE=Z2 IO=0x20

UART0: IO=0x68 16550A MODE=38400,8,N,1

DSRTC: MODE=STD IO=0x70 Wed 2022-01-19 19:40:37 CHARGE=OFF

MD: UNITS=2 ROMDISK=384KB RAMDISK=384KB

The ParPortProb Board is shown as not connected with the address 0X60, although it is connected.

I didn't connect a chain drive because I still don't have the chip for it.

greeting

Stefan